

INSTALLATION METHOD OF WATER GUIDE CLIP



1. Where do you pack it?

Answer: Take it away with mud, install it where there is mud belt, buckle it in the most obvious place with mud belt trace.

2. How many?

A: On average, two pieces should be installed for each component. One piece should be installed for each corner with ash accumulation, two pieces should be installed for the frame with uniform ash accumulation, and three pieces should be installed for the ash accumulation belt with a length of more than one meter (as shown in the following figure). Install one piece about 2cm from the side frame.


3. How do I install it?

Answer: When the water guide clip is fastened to the frame of the component, the buckle should be in place without skew or warping feet. Pay special attention to the installation of two or three pieces, from the corner to leave a gap of 10 cm!


4. Special attention should be paid to the installation of components in the middle of large-area array: if the distance between components is greater than 8 mm, the drainage clip can be put into the frame first, and then pressed with a flat shovel.



The ash belt is more than 1 meter long

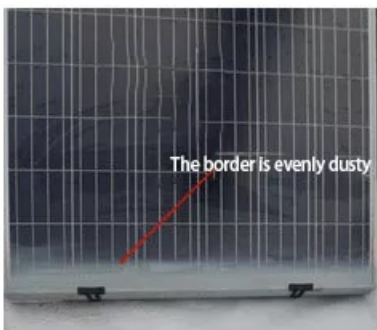

Frame evenly dusty, install 2 pieces

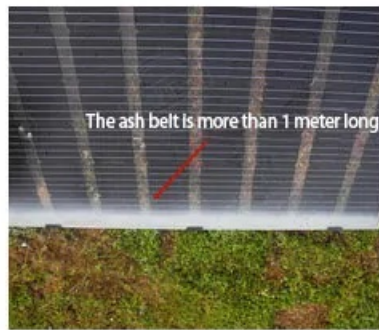

If the length of ash belt exceeds 1 meter, install three pieces

Warm tip: the size of the component may be different. If it cannot be installed, buckled or loosened, please contact us to provide drainage fire of appropriate size. Before large area installation, be sure to carry out a small amount of trial assembly first, and then install in large quantities if there is no problem.